RF Transfer Switch Matrix

RC-2MTS-40

50 Ω DC to 40 GHz

The Big Deal

- Dual mechanical transfer switch
- Wideband performance up to 40 GHz
- High reliability, 2 million switch cycles
- High isolation



Case Style: SH3109

RoHS Compliant

See our web site for RoHS Compliance methodologies and qualifications

Typical Applications

- 5G node / device testing
- Automated test equipment
- Fail-safe / redundancy switching
- Switch matrices

Product Overview

Mini-Circuits' RC-2MTS-40 comprises a pair of independently controlled, electro-mechanical transfer switches. Each switch operates over a wide bandwidth, from DC to 40 GHz with high isolation (70 dB typical), low insertion loss (0.5 dB typical) and high input power rating. The switches are of a failsafe and break-before-make-configuration using a patented design which ensures long-term reliability, with a minimum life time of 2 million switching cycles when used within the noted specifications.

The switch box is constructed in a compact, rugged metal case $(4.5 \times 6.0 \times 2.25)$ with all 2.92mm (f) RF connectors on the front panel. The switches are controlled via USB or Ethernet, allowing control directly from a PC, or remotely over a network. Full software support is provided, including our user-friendly GUI application for Windows and a full API with programming instructions for Windows and Linux environments (both 32-bit and 64-bit systems).

Key Features

Feature	Advantages
Dual transfer switches	Transfer switches provide a simple DPDT switch application (2 input to 2 output switch matrix) and are a useful building block in much larger switch matrices
Fail-safe design	The switches revert to a known default state when the DC supply is removed, allowing their use in systems that must continue to operate safely in the event of power failure
Break-before-make configuration	Prevents a momentary connection of the old and new signal paths, reducing the inconsistent transient effects that could otherwise be observed during switching
USB & Ethernet control	USB HID and Ethernet (HTTP / Telnet) interfaces provide easy compatibility with a wide range of software setups and programming environments
Full software support	User friendly Windows GUI (graphical user interface) allows manual control straight out of the box, while the comprehensive API (application programming interface) with examples and instructions allows easy automation in most programming environments

Electrical Specifications at 25°C

Parameter	Conditions	Min.	Тур.	Max.	Units	
Frequency Range		DC		40	GHz	
	DC - 12 GHz	_	0.15	0.40		
Insertion Loss	12 - 26 GHz	_	0.25	0.70	dB	
	26 - 40 GHz	_	0.50	0.80		
	DC - 12 GHz	60	90	_		
Isolation	12 - 26 GHz	55	85	_	dB	
	26 - 40 GHz	50	70	_		
	DC - 12 GHz	_	1.05			
VSWR	12 - 26 GHz	_	1.20		:1	
	26 - 40 GHz	_	1.50			
Switching Time	-	_	25	_	ms	
	DC - 12 GHz			20		
RF Input Power (Cold Switching) ¹	12 - 26 GHz			10	W	
(Cola Cinicining)	26 - 40 GHz			5		
Cuitab Lifatima (nav Cuitab)	<0.1W hot switching ²	2	_	_	million ovoloo	
Switch Lifetime (per Switch)	0.1 - 1W hot switching	_	1	_	million cycles	
Rated Voltage	24V _{DC} input	23	24	25	V	
nateu voltage	USB port	_	5	_		
Rated Current (24V DC Input)	Both switches in state 2	_	440	610	mA	
Trated Gurrent (24v DO Input)	Both switches in state 1	_	90	120	IIIA	
Rated Current (USB)		_	10	20	mA	

Switching States (per Switch)




Absolute Maximum Ratings


	•
Operating Temperature	0°C to 40°C
Storage Temperature	-15°C to 85°C
Supply Voltage	26V


Connections

Port Name	Connector Type		
RF Switch A (J1, J2, J3 & J4)	2.92 mm female		
RF Switch B (J1, J2, J3 & J4)	2.92 mm female		
USB	USB type-B		
Ethernet / LAN	RJ45		
24V _{DC} Input	2.1mm center positive DC socket		


 $^{^1}$ Maximum power per path, with all portS terminated into 50Ω 2 Hot switching power above this level will degrade the switch lifetime.

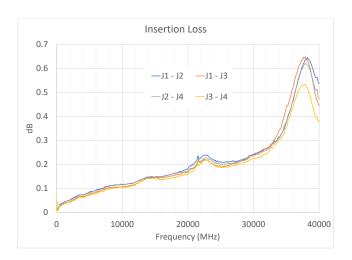


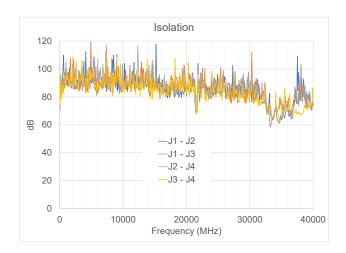

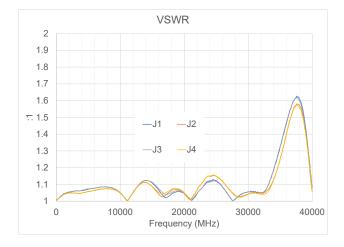


Outline Drawing (SH3109)

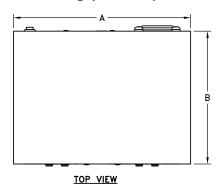

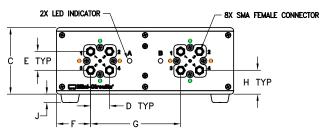


FRONT VIEW



W N

<u>BOTTOM VIEW</u>
SHOWN WITH RUBBER FEET REMOVED AND BRACKETS INSTALLED.

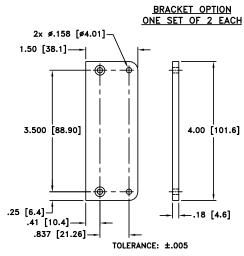

INSTRUCTION FOR MOUNTING BRACKETS:

TOOL REQUIRED: PHILLIPS
HEAD SCREW DRIVER
STEP 1: REMOVE RUBBER FEET

TEP 1: REMOVE RUBBER FEET FROM THE BOTTOM OF THE UNIT, DO NOT DISCARD THE FASTENERS.

STEP 2: MOUNT THE BRACKETS
WITH THE FASTENERS
REMOVED IN STEP 1,
USING THE COUNTER
BORE HOLES IN THE
BRACKET.

Outline Dimensions (inch)

wt	М	L	K	J	Н	G	F	Е	D	С	В	Α
grams	6.75	0.375	3.50	0.28	0.81	3.05	1.16	0.64	0.64	2.25	4.50	6.00
880	171.45	9.52	88.90	7.1	20.5	77.5	29.4	16.2	16.2	57.2	114.3	152.4

Software Specifications

Software & Documentation Download:

- Mini-Circuits' full software and support package including user guide, Windows GUI, DLL files, programming manual and examples can be downloaded free of charge from https://www.minicircuits.com/softwaredownload/rfswitchcontroller.html
- Please contact testsolutions@minicircuits.com for support

Minimum System Requirements:

Parameter	Requirements		
Interface	USB HID & Ethernet (HTTP & Telnet)		
	GUI	Windows 98 or later	
System Requirements	USB API DLL	Windows 98 or later and programming environment with ActiveX or .NET support	
	USB Direct Programming	Linux, Windows 98 or later	
	Ethernet Windows, Linux or Mac computer with a netw port and Ethernet TCP/IP support		
Hardware	Pentium II or later with 256 MB RAM		

Application Programming Interface (API) Ethernet Support:

- Simple ASCII / SCPI command set for attenuator control
- Communication via HTTP or Telnet
- · Supported by most common programming environments

USB Support (Windows):

- ActiveX COM DLL file for creation of 32-bit programs
- .NET library DLL file for creation of 32 / 64-bit programs
- Supported by most common programming environments (refer to application note AN-49-001 for summary of supported environments)


USB Support (Linux):

• Direct USB programming using a series of USB interrupt codes


Full programming instructions and examples available for a wide range of programming environments / languages.

Graphical User Interface (GUI) for Windows - Key Features

- Connect via USB or Ethernet
- Run GUI in "demo mode" to evaluate software without a hardware connection

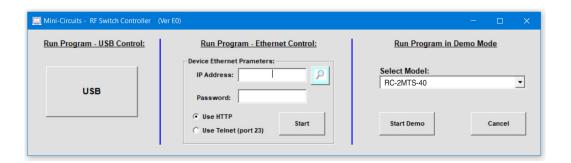

- · View and set switch states at the click of a button
- · Configure and run timed switching sequences
- Set start-up switch state
- Configure Ethernet IP settings

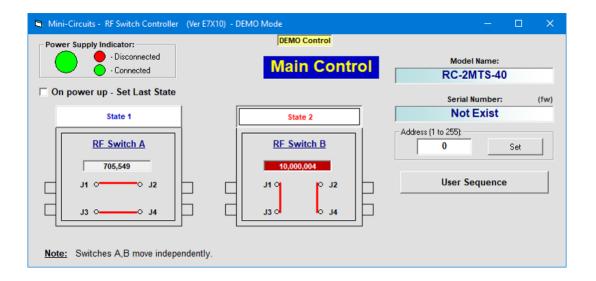

Ordering Information

Refer to Mini-Circuits' website for pricing and availability information: https://www.minicircuits.com/WebStore/dashboard.html?model=RC-2MTS-40

Model	Description
RC-2MTS-40	USB & Ethernet controlled transfer switch matrix

Included Accessories	Part No.	Description
morade Accessories	Tarrito.	-
	AC/DC-24-3W1	AC/DC 24V _{DC} Grounded Power Adaptor. Operating temperature: 0°C to +40°C, I _{Max} =2.5A
	CBL-3W1-XX	AC Power Cord (Select one power cord from below with each Switch Matrix box)
and the state of t	USB-CBL-AB-3+	2.7 ft (0.8 m) USB Cable: USB type A(Male) to USB type B(Male)
AC Power Cords ⁵	Part No.	Description
	CBL-3W1-US	Power Cord for United States
4	CBL-3W1-EU	Power Cord for Europe
4	CBL-3W1-UK	Power Cord for United Kingdom
	CBL-3W1-AU	Power Cord for Australia and China
	CBL-3W1-IL	Power Cord for Israel

^{5.} If you need a Power cord for a country not listed please contact testsolutions@minicircuits.com

Optional Accessories	Description
USB-CBL-AB-3+	2.7 ft (0.8 m) USB Cable: USB type A(Male) to USB type B(Male)
USB-CBL-AB-7+	6.8 ft (2.1 m) USB Cable: USB type A(Male) to USB type B(Male)
USB-CBL-AB-11+	11 ft (3.4 m) USB Cable: USB type A(Male) to USB type B(Male)
CBL-RJ45-MM-5+	5 ft (1.5 m) Ethernet cable: RJ45(Male) to RJ45(Male) Cat 5E cable
BKT-272-08+	Bracket (One set of 2 each)

Additional Notes

- A. Performance and quality attributes and conditions not expressly stated in this specification document are intended to be excluded and do not form a part of this specification document.
- B. Electrical specifications and performance data contained in this specification document are based on Mini-Circuit's applicable established test performance criteria and measurement instructions.
- C. The parts covered by this specification document are subject to Mini-Circuits standard limited warranty and terms and conditions (collectively, "Standard Terms");
 Purchasers of this part are entitled to the rights and benefits contained therein. For a full statement of the Standard Terms and the exclusive rights and remedies thereunder, please visit Mini-Circuits' website at www.minicircuits.com/MCLStore/terms.jsp

