Ultrasonic label fork



en 03-2017/09 50125952-02











- Ultrasonic forked sensor for universal application
- Large mouth width, hence also suitable for booklets or fan-fold flyers
- easyTeach function: press button - dispense labels - done!
- ALC function (auto level control): maximum function reserve via automatic online optimization of the switching threshold
- Warning output for indicating teach or function errors
- NEW static teach on base material, no loss of labels
- **NEW** *easyTune* for fine adjustment of the switching threshold









Accessories:

(available separately)

- Short carriage (part no. 50114055)
 As replacement for the series part.
- Extended carriage (Part No. 50114056)
 For better guiding of oversized labels.
 The carriage can be shortened at any point.
- M12 connectors (KD ...)
- Cables with M 12 connector (KD...)


Dimensioned drawing

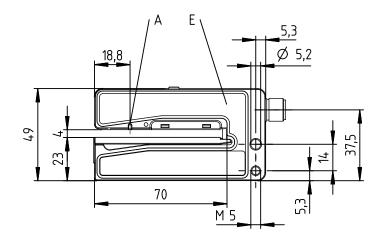


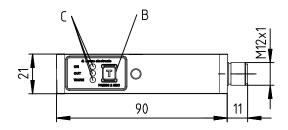

- Dimensioned drawings for **extended carriage** and **tape guide**, see Mechanical accessories on Page 10
- A Sensor marker (center of label tape)
- B Teach-in button
- C Indicator diodes (ON, OUT, WARN)
- E Sensor

Electrical connection





We reserve the right to

Technical data

Physical data

4mm Mouth width Mouth depth 68mm Label length ≥5mm Label width ≥ 10mm Label gap ≥2mm ≤ 240 m/min (4 m/s) Conveyor speed ≤ 50 m/min (0.83 m/s) Conveyor speed during teach-in Typ. response time ≤ 200 µs

Repeatability 1) ± 0.2 mm ≤ 300ms acc. to IEC 60947-5-2 Readiness delay

Electrical data

Operating voltage U_B²⁾ 12VDC (-5%) ... 30VDC (incl. residual ripple) Residual ripple ≤ 15% of U_B Open-circuit current ≤ 80 mA .../6. Switching output 3)

1 push-pull switching output
Pin 4: PNP light switching, NPN dark switching
push-pull switching output
Pin 4: PNP dark switching, NPN light switching .../6D.

1 push-pull switching output

Pin 2: active low (normal operation high, event case low)

Light/dark switching, adjustable

Switching point in the label gap Teaching error / function error

 $\geq (U_B-2V)/\leq 2V$ $\leq 100 \text{ mA}$

Teach-in initiated

Ready

Signal voltage high/low Output current Capacitive load ≤ 0.5µF

Indicators

Green LED flashing Yellow LED

Warning output 2)

Function switching output IGSU

Mechanical data

IGSU14D... Diecast zinc, painted silver Diecast zinc, chemically nickel-plated Housing IGSU14DN... Weight Ultrasonic transducer Piezoceramic 4) Connection type M12 connector, 5-pin

Environmental data

Ambient temp. (operation/storage) Protective circuit ⁵⁾ 0°C ... +60°C/-40°C ... +70°C 1, 2 Шĺ VDE protection class Degree of protection Standards applied IEC 60947-5-2, UL 508 UL 508, C22.2 No.14-13 ^{2) 6)} Certifications

Additional functions

Teach-in input ≥ 8V/≤ 2V Active/Not active Input resistance $15k\Omega$

Depending on conveyor speed, label length and spacing between labels


2) For UL applications: use is permitted exclusively in Class 2 circuits according to NEC

The push-pull switching outputs must not be connected in parallel

The ceramic material of the ultrasonic transducer contains lead zirconium titanate (PZT)

1=polarity reversal protection, 2=short circuit protection for all outputs
These proximity switches shall be used with UL Listed Cable assemblies rated 30V, 0.5A min, in the field installation, or equivalent (categories: CYJV/CYJV7 or PVVA/PVVA7)

Marking on the sensor

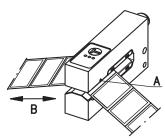

Label center position

Label run

Notes

Observe intended use!

- This product is not a safety sensor and is not intended as personnel protection.
- The product may only be put into operation by competent persons. ♥ Only use the product in accordance with its intended use
- To achieve high repeatability, the label tape must be slightly under tension.
- Align the label tape according to the sensor's marker "Label center position" (see also marking on sensor).
- The label material used determines the achievable precision and the reliability of gap detection!
- Light switching: signal in the label gap.
- Dark switching: signal on the label.

UL REQUIREMENTS

Ambient Temperature Rating: 50°C Enclosure Type Rating: Type 1


IGSU 14D...-S12 - 03 2017/09

Order guide


The sensors listed here are preferred types; current information at www.leuze.com.

	Designation	Part no.
With painted housing		
Pin 4: switching output PNP light switching; pin 2: warning output active low	IGSU14D/6.3-S12	50126784
Pin 4: switching output PNP dark switching; pin 2: warning output active low	IGSU14D/6D.3-S12	50126785
With painted housing and extended carriage		
Pin 4: switching output PNP light switching; pin 2: warning output active low	IGSU14D/6.31-S12	50126786
With chemically nickel-plated housing		
Pin 4: switching output PNP light switching; pin 2: warning output active low	IGSU14DN/6.3-S12	50126788
Pin 4: switching output PNP light switching; pin 2: warning output active low, customer-specific	IGSU14DN/6.3K-S12	50126789
With chemically nickel-plated housing and tape guide		
Pin 4: switching output PNP light switching; pin 2: warning output active low	IGSU14DN/6.3G-S12	50125790

Part number code

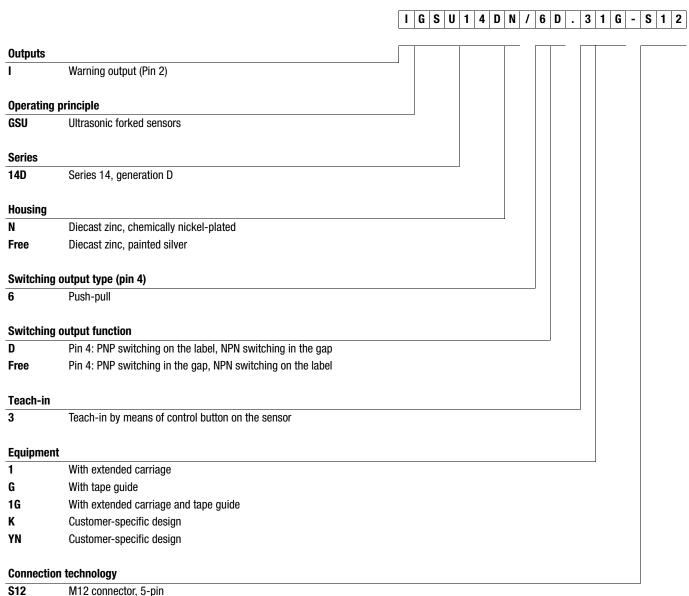

Overview of operating structure for IGSU 14D

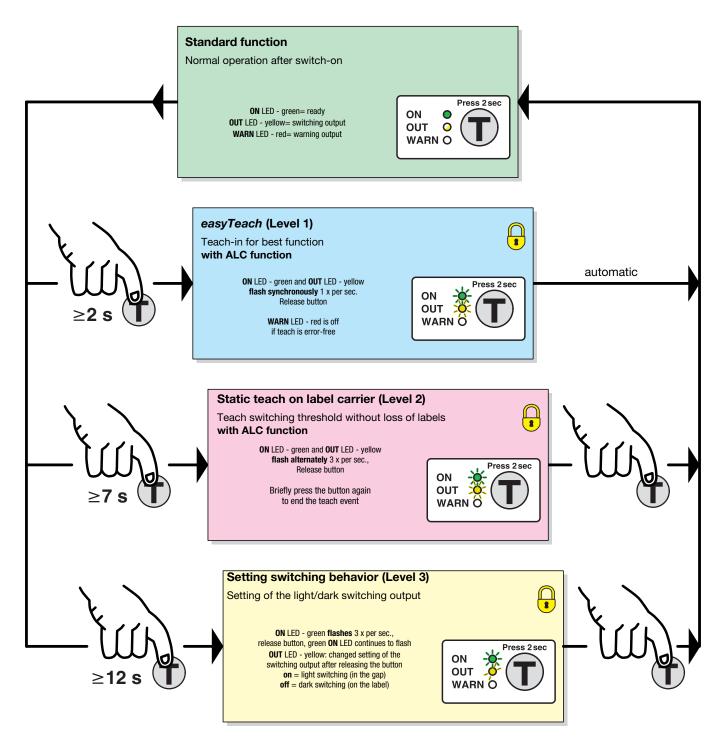

= function lockable through constant application of U_B on the teach input


IGSU 14D...-S12 - 03 2017/09

IGSU 14D standard functions

During operation the sensor is always in this function. The sensor detects label gaps with high precision and speed. This is indicated by the yellow LED and the switching output.

Indicators:

ON LED - green	Constantly ON when operating voltage is applied.
OUT LED - yellow	Indicates the switching signal. LED is ON if the sensor detects label gaps. The display is independent of the output setting.
WARN LED - continuous red light	OFF: error-free operation. ON: teaching error caused by unfavorable label material, ALC function outside of the control window.
WARN LED - flashing red	Short-circuit at the switching output and/or warning output. All outputs are switched to tri-state until the error is rectified.



Operation:

The teach button must be pressed for at least 2 seconds to operate the device. The button can be electrically disabled to prevent accidental operation.

ALC function (auto level control):

In each teach event, the current signal values in the sensor are digitally determined, resulting in the optimum switching threshold being calculated for maximum function reserve. All values are saved and are non-volatile, retaining their validity as long as the dynamic parameters of the system remain unchanged and the material is not changed.

Signal changes can result each time the roll is changed, even with labels that are apparently the same. This is caused, for example, by material variations (material thickness, homogeneity, etc.) which affect the acoustic impedance of the system. Even changes of the dynamic parameters (e.g. tape tension, middle position, jitter, etc.) can have a negative affect on the function reserve of the sensor.

The ALC function now automatically corrects the switching threshold in such a way that the maximum function reserve is always available during operation - the sensor works absolutely reliably and free of errors.



Note

When changing to another type of label, a new adjustment must generally be carried out by carrying out a new teach-in event.

Warning output

The warning output is activated if the red LED on the device is illuminated. This is the case for the following states:

- Teaching error (see description)
- "ALC function faulty" error (control limit reached: clean device, align and reteach)

Sensor adjustment (teach-in) via teach button


easy Teach while the label tape is passing through

Preparation: Insert label tape into the sensor.

- Press the teach button until green and yellow LEDs flash synchronously.
- Release teach button.
- Advance the label tape through the sensor at a max. speed of 50 m/min. The sensor indicates the tape transport by faster simultaneous flashing of the green and yellow LED.
- Ready.

If sufficient teach values are determined, the sensor automatically terminates the teach event and goes into standard mode. The transport of the label tape can be stopped immediately. The number of labels to be transported is always based on the material combination: from experience, the value is between 2 and 10 labels.

If the teach event is faulty (e.g. unfavorable material combination, uneven transport, jittering during transport), the red LED illuminates and the warning output is activated. Repeat teach event. If the fault cannot be rectified, the label material cannot be detected with the IGSU 14C.

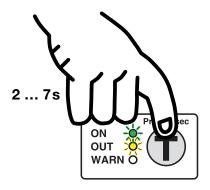


The **green** and the **yellow** LEDs flash **synchronously** approx. **1**x per sec.

Static teach on the label carrier without transport

Preparation: depending on the label size, pull off one or more labels from the carrier and transport the blank area into the sensor.

- Press the teach button until green and yellow LEDs flash alternately.
- Release teach button.
- Briefly press the button again to end the teach event

With this teach event, a one-point calibration is performed on the blank carrier. This process is particularly advantageous because there is no loss of labels during the teach.

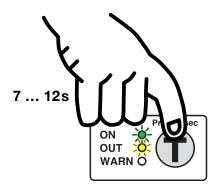

The **green** and the **yellow** LEDs flash **alternately** approx. **3**x per sec.

 $\bigcap_{i=1}^{\infty}$

Note

With the easy Teach process, a two-point calibration is performed which, with respect to detection reliability, is generally to be preferred over the static teach.


IGSU 14D...-S12 - 03 2017/09

easyTune - Manual fine tuning of the switching threshold

With **homogeneous label material**, the signal in the gap between two labels is much larger compared to the signal on the label. For the taught switching threshold, there is a high function reserve in both the gap as well as on the label, and the sensor functions reliably.

To achieve a better function reserve, it can be advantageous to change the taught switching threshold, especially for **inhomogeneous label material**. Used for this purpose is the *easyTune* function, which is similar in principle to a potentiometer. The switching threshold can be adjusted by pressing the button quickly or for a longer period of time.

Pressing the teach button quickly (2ms ... 200ms) reduces the switching threshold slightly; pressing the button for a longer period of time (200ms ... 2s) increases the switching threshold slightly. The change resulting from each press of the button is small. The button may need to be pressed several times in order to achieve a stable operating point. The sensor confirms each press of the button with short or long flash of the green LED. If the upper or lower end of the adjustment range is reached, the green and yellow LEDs flash at a considerably faster frequency and the red LED is illuminated for one second.

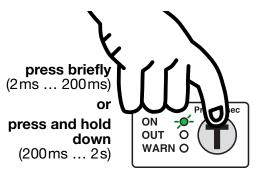


The **green** LED flashes **one time** quickly or for a longer period time after the button is pressed



Note

Please note: easyTune deactivates the ALC function!

Example:

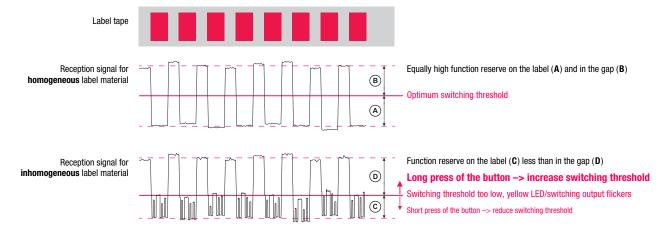


Recommended settings:

Observation	Change to the switching threshold	Measure
After teaching, the yellow LED and the switching output flicker if the label is moved through the sensor, i.e., the function reserve on the label ((\mathbf{C}) in the example) is too low.		Repeatedly press the teach button for a longer period of time until the sensor detects the moving label stably and without interruption.
In rare cases, a highly inhomogeneous carrier tape can affect the functional reliability. The yellow LED and the switching output flicker if the blank carrier tape is moved through the sensor without labels, i.e., the function reserve on the carrier is insufficient.	Decrease	Repeatedly press the teach button quickly until the sensor detects the moving carrier tape without labels stably and without flickering.

Adjusting the switching behavior of the switching output (light/dark switching)

- Press teach button until only the green LED flashes.
- Release the teach button the green LED continues to flash, the yellow LED indicates the changed switching behavior after the button was released.
- Yellow LED ON = output switches on light (in the gap).
 Yellow LED OFF = output switches on dark (on the label).
- Readv.

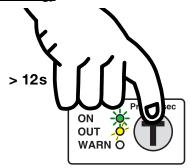

The **green** LED flashes approx. **3**x per sec.

Sensor adjustment (teach-in) via teach input

 $\bigcap_{i=1}^{\infty}$


The following description applies to PNP switching logic!

U _{Teach}	Not connected	Internal pull-down resistor pulls the input down to zero	Teach button can be operated; all functions adjustable
U _{Teach low}	≤ 2V	Low level	Teach button can be operated; all functions adjustable
U _{Teach high}	≥ (U _B -2V)	High level	Teach button disabled; button has no function
U _{Teach}	> 2V < (U _B -2V)	Not permitted	Level not defined; current state is retained

The device setting is stored in a fail-safe way. A reconfiguration following power failure or switch-off is thus not required.

easyTeach while label tape is passing through

Preparation: Insert the label tape in the correct position in the sensor (align the middle of the tape to the sensor marking).

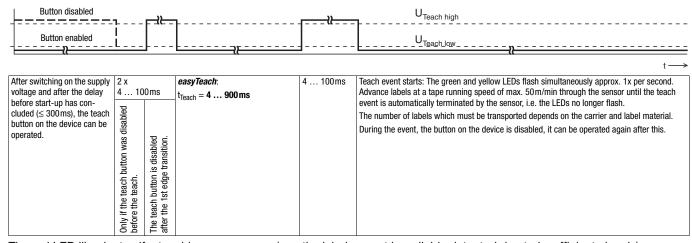


The red LED illuminates if a teaching error occurs (e.g. the label cannot be reliably detected due to insufficient signals). Regardless of the state, the green LED illuminates upon conclusion of the teach event; the yellow LED indicates the current switching state.

IGSU 14D...-S12 - 03 2017/09


Static teach on the label carrier without transport

Preparation: Pull off one label from the tape and insert the empty spot into the fork (align the middle of the tape to the sensor marking).

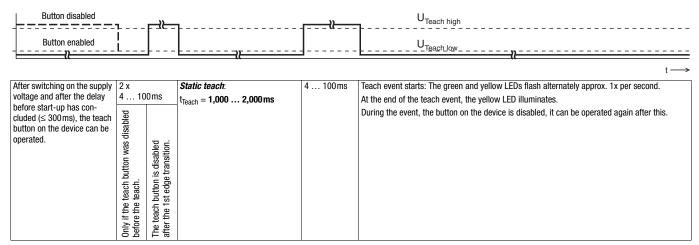

The red LED illuminates if a teaching error occurs (e.g. the label cannot be reliably detected due to insufficient signals).

Adjusting the switching behavior of the switching output - light/dark switching

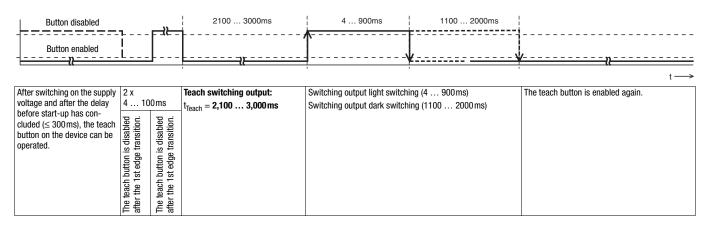

Notices for integrating the sensor in a control concept

If the sensor is taught externally via a control, it may be necessary to receive acknowledgment from the sensor with respect to its current teach state. Use the following chart for this purpose:

Operating mode	Reaction from sensor
Dispensing mode	Dynamic output signal: alternates between gap and label
Teach	Static output signal: the state prior to the teach event is frozen (output in tri-state)
Teach OK	Output signal is dynamic again—warning output not active
Teach faulty	Output signal is dynamic again—warning output active; repeat teach event if necessary

Locking the teach button via the teach input



A **static high signal** (\geq 4ms) at the teach input locks the teach button on the device if required, such that no manual operation is possible (e.g., protection from erroneous operation or manipulation).

If the teach input is not connected or if there is a static low signal, the button is unlocked and can be operated freely.




Mechanical accessories

Extended carriage

The extended carriage (part no. 50114056) can be replaced by the customer with the standard carriage (part no. 50114055).

The carriage can be shortened at any point.

Alternatively, the sensor can also be delivered in the version with factory-mounted carriage (see order guide).

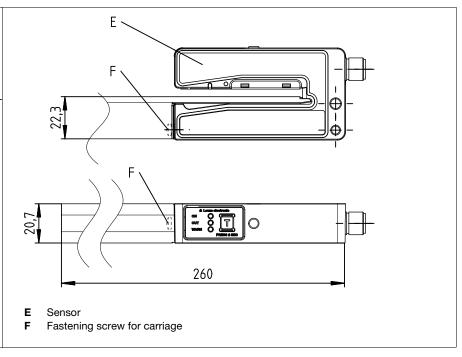

Tape guide

The correct transport of the label tape is decisive for the switching accuracy and the operational safety of the sen-


To achieve an optimum result, a tape guide was developed for the sensor.

Adjusting the tape holder:

If correctly adjusted, the tape more or less follows the contour of the carriage and the label tape slides over the lower fork of the forked sensor (see also figure "Marking on the sensor" on page 2).

We recommend the use of forked sensors with factorymounted tape guide (see order guide).



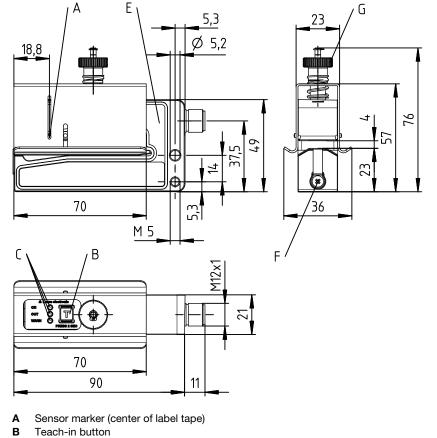

- С Indicator diodes (ON, OUT, WARN)
- Ε Sensor
- Fastening screw for carriage
- G Adjustment screw for height of tape holder

2017/09 IGSU 14D...-S12 - 03